





Note: Read the instructions before mounting!

- Performing any activity with the power supply on constitutes potential hazard of electric shock.
 Prior to mounting, power supply must be switched off by using the main switch.
 - **2.** The fixture can be installed only on a flame-resistant base with ignition temperature at least 100 degrees Celsius. And does not deform or soften (e.g. metal, concrete, plaster).
 - **3.** Activities related to connection to the power supply are to be commissioned to a person with appropriate authorization.
 - **4.** The fixture, when properly assembled, may only be connected to a properly functioning electrical system with compliance with the applicable standards.
 - **5**. Connect the fixture to the electrical supply, observing the correct polarity.
 - (L) PHASE=BROWN; GROUND=YELLOW-GREEN; (N) ZERO=BLUE
 - **6.** All conductors and fitting auxiliary components are to be placed on appropriate distance from the heating parts of the fitting. When choosing the place for mounting, the required minimum distance must be kept between the fitting and the lightened objects.
 - **7.** Prior to replacing, it is necessary to cut off the power supply by main switch.
 - 8. Clean only with dry cloth.
 - **9.** If the external flexible cable or cord of this luminaire is damaged, it shall be exclusively replaced by the manufacturer or his service agent or a similar qualified person in order to avoid a hazard.
 - **10.** Do not cover the fixture. To avoid any fire hazard, provide unrestricted air flow to the heated fitting parts.
 - **11.** Not suitable for accent lighting.
 - **12.** Prior to starting operating, make sure the mounting of the product has been performed appropriately, eliminating the hazard of defective operation, not endangering the surrounding and the users.
 - **13.** The importer/supplier bears no responsibility for damage result from failure to comply with these instructions.

